



BANKS
Outdoors



INSTRUCTION MANUAL





TABLE OF CONTENTS

Stump Overview	3
Stump 1 Assembly	4
Stump 2 Assembly	5
Stump 3 Assembly	6
Stump 4 Assembly	7
Stump 2 Scout/Ice Assembly	8
Stump 4 Scout/Ice Assembly	9
Anchor Kit	10
Bow Hanger	11
Curtain Kit	12
Framed Window	13
Stealth Screen	14
Storage Console	15
Wall Insulation	16
Other Banks Products	17
Warranty Information	18
Warranty Registration Card	19
Company Information	20





STUMP OVERVIEW

CONGRATULATIONS ON PURCHASING YOUR NEW STUMP BLIND!

The Stump has been providing comfortable and enjoyable hunting since 2003. To ensure safety and longevity, we ask that you please follow the instructions carefully. If during the assembly you have any questions, **please call: 800-262-4129 from 8am-5pm M-F central standard time.**

Whether you are using your Stump to introduce a young hunter to the woods or positioning yourself for the hunt of a lifetime, you will quickly realize that this blind is one of the most valuable tools you have in your arsenal.



CONTENTS IN THIS PACKAGE:



1. Stump Blind
2. Assembly Hardware
3. Window Kit with Hardware
4. Steel Base
5. Wood Floor
6. Instruction Manual





STUMP 1

TOOLS NEEDED:

- 1/2" Nut Driver
- Flat Head Screwdriver
- Phillips Screwdriver/Bit
- Cordless Drill

INCLUDED PARTS:

- | | |
|-----------------|---------------------|
| (1) Stump Blind | (1) Door Handle |
| (1) Steel Base | (1) Grab Handle |
| (1) Wood Floor | (2) 1/4x1" Washers |
| (8) Lag Bolts | (2) 10/24x1" Bolts |
| | (2) 10x24 Lock Nuts |

1. Place your grab handle on the outside of the blind to the left of the door. See the two predrilled holes. On the outside of the blind place the handle over the holes, run your (2) 10-24 x 1 1/4" handles bolts through the handle and into the stand. Insert a fender washer on the inside on each of the bolts. Fasten down with your 10-24 lock nuts and tighten to a snug fit. **DO NOT OVER TIGHEN!**

2. Attach the outside door handle to open door. Insert flat head door handle bolt into black handle then attach it to the door latch and tighten.

3. (To Elevate) Set the stand on its side. Take your green treated 4 x 4 posts and slide them into the steel pockets on the base. Install two lag screws into each post through the holes on each steel pocket.

Cross brace all your legs for added support. You are ready to elevate your Stump.

NOTE: Maximum height is 8ft. to the angled base.



STUMP 2

TOOLS NEEDED:

- 1/2" Nut Driver
- Flat Head Screwdriver
- Phillips Screwdriver/Bit
- Cordless Drill
- 1/4" Drill Bit
- 7/16" Wrench
- 3/8" Wrench

INCLUDED PARTS:

- | | |
|----------------------|---------------------------|
| (1) Stump Blind | (1) Door Handle |
| (1) Steel Base | (1) Grab Handle |
| (1) Wood Floor | (2) 1/4x1" Washers |
| (8) Lag Bolts | (2) 10/24x1" Bolts |
| (1) Shelf | (2) 10x24 Lock Nuts |
| (2) 1/4-20 Lock Nuts | (2) 1/4-20 x 1 1/4" Bolts |
| (1) 1/4" Washers | |

1. Install your one shelf. Hold your shelf in the desired location on the wall of your blind. In the slots below the shelf drill a 1/4" hole into the wall of the blind. Bolt the shelf to the blind using the (2) 1/4-20 x 1 1/4" bolts, 1/4" fender washers, and 1/4-20 nuts.



2. Attach the outside door handle to open door. Insert flat head door handle bolt into black handle then attach it to the door latch and tighten.
3. Place your grab handle on the outside of the blind to the left of the door. See the two predrilled holes. On the outside of the blind place the handle over the holes, run your (2) 10-24 x 1 1/4" handles bolts through the handle and into the stand. Insert a fender washer on the inside on each of the bolts. Fasten down with your 10-24 lock nuts and tighten to a snug fit. **DO NOT OVER TIGHEN!**
4. (To Elevate) Set the stand on its side. Take your green treated 4 x 4 posts and slide them into the steel pockets on the base. Install two lag screws into each post through the holes on each steel pocket.

Cross brace all your legs for added support. You are ready to elevate your Stump.

NOTE: Maximum height is 8ft. to the angled base.

STUMP 3

TOOLS NEEDED:

- 1/2" Nut Driver
- 7/16" Nut Driver
- Phillips Screwdriver/Bit
- Cordless Drill
- 1/4" Drill Bit
- 7/16" Wrench


INCLUDED PARTS:

- | | |
|-----------------|---------------------------|
| (1) Stump Blind | (1) Shelf |
| (1) Steel Base | (2) 1/4-20 x 1 1/4" Bolts |
| (1) Wood Floor | (2) 1/4-20 Lock Nuts |
| (8) Lag Bolts | (2) 1/4" Washers |

1. Install your one shelf. Hold your shelf in the desired location on the wall of your blind. In the slots below the shelf drill a 1/4" hole into the wall of the blind. Bolt the shelf to the blind using the (2) 1/4-20 x 1 1/4" bolts, 1/4" fender washers, and 1/4-20 nuts.



2. (To Elevate) Set the stand on its side. Take your green treated 4 x 4 posts and slide them into the steel pockets on the base. Install two lag screws into each post through the holes on each steel pocket.

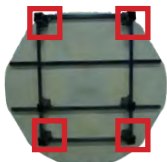

Cross brace all your legs for added support. You are ready to elevate your Stump.

NOTE: Maximum height is 8ft. to the angled base.



STUMP 4

TOOLS NEEDED:

- 1/2" Nut Driver
- 7/16" Nut Driver
- Phillips Screwdriver/Bit
- Cordless Drill
- 1/4" Drill Bit
- 7/16" Wrench

INCLUDED PARTS:

- | | |
|-----------------|---------------------------|
| (1) Stump Blind | (1) Shelf |
| (1) Steel Base | (2) 1/4-20 x 1 1/4" Bolts |
| (1) Wood Floor | (2) 1/4-20 Lock Nuts |
| (8) Lag Bolts | (2) 1/4" Washers |

1. Install your one shelf. Hold your shelf in the desired location on the wall of your blind. In the slots below the shelf drill a 1/4" hole into the wall of the blind. Bolt the shelf to the blind using the (2) 1/4-20 x 1 1/4" bolts, 1/4" fender washers, and 1/4-20 nuts.



2. Attach the outside door handle to open door. Insert flat head door handle bolt into black handle then attach it to the door latch and tighten.

3. (To Elevate) Set the stand on its side. Take your green treated 4 x 4 posts and slide them into the steel pockets on the base. Install two lag screws into each post through the holes on each steel pocket.

Cross brace all your legs for added support. You are ready to elevate your Stump.

NOTE: Maximum height is 8ft. to the angled base.



STUMP 2 SCOUT & ICE

TOOLS NEEDED:

- 1/2" Nut Driver
- Flat Head Screwdriver
- Phillips Screwdriver/Bit
- Cordless Drill
- 1/4" Drill Bit
- 7/16" Wrench
- 3/8" Wrench

INCLUDED PARTS:

- | | |
|----------------------|---------------------------|
| (1) Stump Blind | (1) Door Handle |
| (1) Sled Base | (1) Grab Handle |
| (1) Wood Floor | (2) 1/4x1" Washers |
| (1) Steel Hitch | (2) 10/24x1" Bolts |
| (1) Shelf | (2) 10x24 Lock Nuts |
| (2) 1/4-20 Lock Nuts | (2) 1/4-20 x 1 1/4" Bolts |
| (2) 1/4" Washers | |

1. Install your one shelf. Hold your shelf in the desired location on the wall of your blind. In the slots below the shelf drill a 1/4" hole into the wall of the blind. Bolt the shelf to the blind using the (2) 1/4-20 x 1 1/4" bolts, 1/4" fender washers, and 1/4-20 nuts.



2. Attach the outside door handle to open door. Insert flat head door handle bolt into black handle then attach it to the door latch and tighten.

3. Place your grab handle on the outside of the blind to the left of the door. See the two predrilled holes. On the outside of the blind place the handle over the holes, run your (2) 10-24 x 1 1/4" handles bolts through the handle and into the stand. Insert a fender washer on the inside on each of the bolts. Fasten down with your 10-24 lock nuts and tighten to a snug fit. **DO NOT OVER TIGHEN!**

Your Assembly is Complete!

STUMP 4 SCOUT & ICE

TOOLS NEEDED:

- 1/2" Nut Driver
- 7/16" Nut Driver
- Phillips Screwdriver/Bit
- Cordless Drill
- 1/4" Drill Bit
- 7/16" Wrench

INCLUDED PARTS:

- | | |
|-----------------|---------------------------|
| (1) Stump Blind | (1) Shelf |
| (1) Sled Base | (2) 1/4-20 x 1 1/4" Bolts |
| (1) Steel Hitch | (2) 1/4-20 Lock Nuts |
| | (2) 1/4" Washers |

1. Install your one shelf. Hold your shelf in the desired location on the wall of your blind. In the slots below the shelf drill a 1/4" hole into the wall of the blind. Bolt the shelf to the blind using the (2) 1/4-20 x 1 1/4" bolts, 1/4" fender washers, and 1/4-20 nuts.



2. Attach the outside door handle to open door. Insert flat head door handle bolt into black handle then attach it to the door latch and tighten.

Your Assembly is Complete!




ANCHOR KIT

INCLUDED PARTS:

- (1) Turn Buckle
- (1) 10' Cable
- (1) Earth Anchor
- (2) Cable Clamps

1. Attach the Cable to the d-ring of the Steel Base.

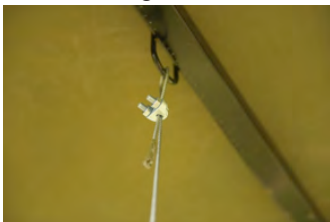

2. Screw in the Earth Anchor directly below the blind.



3. Attach the Turn Buckle to the Earth Anchor.
4. Attach the Cable to the Turn Buckle.
5. Tighten Cable and Clamp with the Cable Clamps.





BOW HANGER

TOOLS NEEDED:

- Phillips Screwdriver/Bit
- Cordless Drill
- 1/4" Drill Bit
- 7/16" Wrench

INCLUDED PARTS:

- | | |
|----------------|--------------|
| (1) Bow Hanger | (1) Lock Nut |
| (1) 1/4" Bolt | (1) Washer |
| (1) Lock Nut | |

1. Find desired location on the inside of the roof of your Stump.
2. Drill 1/4" hole at the location.
3. Insert the bolt into the Bow Hanger and insert the bolt through the black bushing.



4. Insert the bolt through your drilled hole. On top of the blind, place the washer on the bolt, then place the lock nut on the bolt and tighten to a snug fit.





CURTAIN KIT

INCLUDED PARTS:

(2) Magnets/Screws per Curtain
*Number of curtains varies per blind

1. Hold the curtain up to the window & line up where to attach the magnets.
2. Screw in the magnets.



3. Attach the curtains to the magnets. Make sure the curtain covers the window.



4. Recommended: Curtains should be placed with camouflage facing out.





FRAMED & VISION WINDOW

INCLUDED PARTS:

- (4) Window Latches
- (4) 1 3/4" 10/24 Bolts
- (2) 1" 10/24 Bolts
- (6) Lock Nuts

1. Unpack items. **If applying to a Banks Blind proceed to step 3. If applying to another, proceed to step 2.**
2. Cut out an opening for the Framed or Vision window to fit into.
 - 2a. *Notice radius corners & cut opening accordingly.
 - 2b. Insert Framed Window into the opening & drill out the 6 attachment holes.
3. Take your 1 3/4" 10-24 bolts and insert into the window latch so the working on the latch faces the head of the bolt. See photo below for the correct holes to use. Secure the bolt with the lock nut and tighten to a snug fit. Repeat for remaining holes.



4. For the holes indicated in the photo below, use the 1" 10-24 bolts to fasten the framed window to the blind.



5. Adjust the tightness of the bolts so that the windows open properly and the latches latch properly.





STEALTH SCREEN


1. Wipe down outside of window to remove dirt and dust, creating a dry and clean surface.



2. Peel off only the heavy white paper exposing black adhesive.



3. Apply Stealth Screen to the outside of your Stump Window.

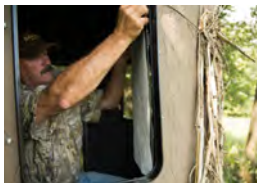

4. Use a flat surface to remove any air bubbles.
5. Peel off remaining paper to expose camouflage.



6. Use a utility knife to trim edges so they fit the shape of the window.
7. Repeat for remaining windows.





STORAGE CONSOLE

INCLUDED PARTS:

- | | |
|-------------------------|----------------------|
| (1) Storage Console | (2) 1/4-20 Lock Nuts |
| (2) 1/4-20 x 1.5" Bolts | (2) Washers |

1. Place your Storage Shelf in desired location in your blind.



2. Drill your (2) attachment holes into the blind by using the storage shelf as your template. We recommend using a level.



3. Attach the Storage Shelf to the blind using the 1/4-20 x 1.5" bolts and washers.

4. Fasten the shelf to the blind using the 1/4-20 lock nuts. Tighten to a snug fit.





WALL INSULATION

1. Unpack all layers.
2. Wipe down all the walls.
3. Follow cut-sheet for layout & placement of wall insulation.
4. Crack & peel the backing of the insulation to expose the adhesive film.
5. Stick insulation to the walls.





OTHER BANKS PRODUCTS

Check out these other Banks Outdoors products!

FEEDBANK

The Feed Bank is a gravity-fed deer feeder designed to elevate with a single center post. This eliminates any obstruction for bucks to access the feed. Available in 40lbs, 150lbs, 300lbs and 600lbs.



WILD WATER®

Wild Water® is the watering system for all the wildlife on your property. Reduce the effect disease and dehydration can have on your deer herd.



WILD WATER® MINERAL SUPPLEMENT

The mineral supplement not only maximizes deer health, it is also highly desired which increases deer activity right where you want them.



STEEL SKID SYSTEM

The Steel Skid System mounts to any Banks Outdoors hunting blind and instantly delivers a solid tower blind, which is easy to move around the property and get in and out when hunting.



STEEL TOWER SYSTEM

Available in 4', 8' and 12' heights, The Steel Tower System mounts to any Banks Outdoors hunting blind.





WARRANTY

LIMITED LIFETIME WARRANTY

The Banks Outdoors product(s) purchased from our authorized dealers is warranted to be free from defects in material and workmanship for as long as the registered original owner owns the blind. Banks Outdoors will repair or replace your product, with the same or comparable model free of charge (shipping charges not included) for life, once the product has been registered with Banks Outdoors, in the event of a defect in materials or workmanship occurring during normal use. The warranty only extends to the original retail purchaser named on the product registration. **The product must be registered on www.banksoutdoors.com or by mail before warranty performance.**

WHAT IS NOT COVERED?

Not covered under this warranty are failures due to misuse, abuse or normal wear and tear and improper installation. Additionally, failures due to acts of God & nature, such as storms, strong winds, and animal damage are not covered by this warranty.

NO ADDITIONAL WARRANTY APPLIES

The Limited Lifetime Warranty is the exclusive warranty for Banks Outdoors products. Dealers, Retailers, or Representatives are not authorized to alter this warranty or create additional warranties on behalf of Banks Outdoors.

HOW TO SUBMIT A WARRANTY REQUEST

Please call 1-800-262-4129.

To become a registered owner of your Banks Outdoors Stump Blind, please complete the online Product Registration form at www.banksoutdoors.com, or submit your registration by mailing the card included with your product. Your product needs to be registered in order to take advantage of the Limited Lifetime Warranty.





Cut along line

WARRANTY REGISTRATION CARD

The product must be registered on www.banksoutdoors.com or by mail before warranty performance.

Name: _____

Address: _____

City: _____ State: _____ Zip: _____

Email: _____

Phone Number: _____

Product: _____

Serial #: _____ Date of Purchase: _____

Purchase Location: _____

Mail to: BANKS OUTDOORS - 31785 64TH AVE CANNON FALLS, MN 55009





COMPANY INFORMATION

2018



31785 64TH AVE CANNON FALLS, MN 55009

1-800-262-4129

WWW.BANKSOUTDOORS.COM

